

AD-A216 696

# Center for Night Vision and Electro-Optics

AMSEL-NV-TR-0089

Reliability Testing of the Hughes  
Temperature Controlled 1/4 Watt  
Split Cycle Cryogenic Cooler  
(HD-1045 (V)/UA)

by  
James Shaffer  
Howard Dunmire  
Raemon Samuels  
Martin Trively

DECEMBER 1989

Approved for public release; distribution unlimited.

DTIC  
ELECTE  
JAN 12 1990  
S D CS D



FORT BELVOIR, VIRGINIA 22060-5677

90 01 11 132

Destroy this report when it is no longer needed.  
Do not return it to the originator.

The citation in this report of trade names of  
commercially available products does not constitute  
official endorsement or approval of the use of such  
products.

UNCLASSIFIED

## SECURITY CLASSIFICATION OF THIS PAGE

REPORT DOCUMENTATION PAGE				Form Approved OMB No. 0704-0188	
1a. REPORT SECURITY CLASSIFICATION Unclassified			1b. RESTRICTIVE MARKINGS None		
2a. SECURITY CLASSIFICATION AUTHORITY			3. DISTRIBUTION/AVAILABILITY OF REPORT Approved for public release; distribution unlimited.		
2b. DECLASSIFICATION/DOWNGRADING SCHEDULE					
4. PERFORMING ORGANIZATION REPORT NUMBER(S) AMSEL-NV-TR-0089			5. MONITORING ORGANIZATION REPORT NUMBER(S)		
6a. NAME OF PERFORMING ORGANIZATION USA CECOM, Center for Night Vision and Electro-Optics (C <sup>2</sup> NVEO)		6b. OFFICE SYMBOL (if applicable) AMSEL-RD-NV-SES		7a. NAME OF MONITORING ORGANIZATION	
6c. ADDRESS (City, State, and ZIP Code) Director, C <sup>2</sup> NVFO ATTN: AMSEI-RD-NV-SES-FIRE Ft. Belvoir, VA 22060-5677		7b. ADDRESS (City, State, and ZIP Code)			
8a. NAME OF FUNDING/SPONSORING ORGANIZATION US Army CECOM		8b. OFFICE SYMBOL (if applicable)		9. PROCUREMENT INSTRUMENT IDENTIFICATION NUMBER	
8c. ADDRESS (City, State, and ZIP Code)		10. SOURCE OF FUNDING NUMBERS			
		PROGRAM ELEMENT NO.		PROJECT NO.	TASK NO.
				WORK UNIT ACCESSION NO.	
11. TITLE (Include Security Classification) Reliability Testing of the Hughes Temperature Controlled 1/4 Watt Split Cycle Cryogenic Cooler (HD-1045 (V)/UA) (U)					
12. PERSONAL AUTHOR(S) James Shaffer, Howard Dunmire, Raemon Samuels, and Martin Trively					
13a. TYPE OF REPORT Final		13b. TIME COVERED FROM 7 Jun 88 TO 6 Mar 89		14. DATE OF REPORT (Year, Month, Day) December 1989	
15. PAGE COUNT 32					
16. SUPPLEMENTARY NOTATION					
17. COSATI CODES			18. SUBJECT TERMS (Continue on reverse if necessary and identify by block number)		
FIELD	GROUP	SUB-GROUP			
			Cryogenic Cooler, Stirling Cycle		
19. ABSTRACT (Continue on reverse if necessary and identify by block number)					
<p>This final report describes and provides data from reliability testing of the Hughes Aircraft Company (HAC) temperature controlled 1/4 Watt Split Cycle Cryogenic Cooler (HD-1045 (V)/UA). The testing was performed at the request of the Driver's Thermal Viewer (DTV) Project Office by the Center for Night Vision and Electro-Optics Far Infrared Engineering Team. The test was operated in accordance with the HD-1045 (V)/UA specification. The coolers successfully met the reliability requirements of the specification.</p>					
20. DISTRIBUTION/AVAILABILITY OF ABSTRACT			21. ABSTRACT SECURITY CLASSIFICATION		
<input checked="" type="checkbox"/> UNCLASSIFIED/UNLIMITED <input type="checkbox"/> SAME AS REPORT <input type="checkbox"/> DTIC USERS			Unclassified		
22a. NAME OF RESPONSIBLE INDIVIDUAL James Shaffer			22b. TELEPHONE (Include Area Code) 703-664-1345		22c. Office Symbol AMSEL-RD-NV-SES



## PREFACE

This report details the performance and results of reliability testing performed on the Hughes Aircraft Company (HAC) temperature controlled HD-1045 rotary split cryogenic cooler. This test was requested by the Driver's Thermal Viewer (DTV) program to evaluate the probable performance of the cooler during DTV quality, environmental, life, and operational testing.

The test was conducted from 7 June 1988 to 6 March 1989. No major problems were encountered during performance of the test. Three units were tested and jointly accumulated 5,625.62 operating hours before their performance failed to meet the specification. This resulted in a mean-time-to-failure (MTTF) of 1,875.21 hours, meeting the HD-1045 reliability requirement. To further characterize the performance of the coolers, testing was continued past the point where hours accrued counted towards the MTTF. This performance should sufficiently preclude any negative affects on the DTV system due to cooler reliability.



Accession For	
NTIS CRA&I	<input checked="checked" type="checkbox"/>
DTIC TAB	<input type="checkbox"/>
Unannounced	<input type="checkbox"/>
Justification	
By	
Distribution /	
Availability Codes	
Dist	Avail and/or Special
A-1	

## TABLE OF CONTENTS

	Page
SECTION I INTRODUCTION .....	1
SECTION II BACKGROUND.....	1
SECTION III TEST OBJECTIVE.....	2
SECTION IV TEST DESCRIPTION .....	2
SECTION V TEST EQUIPMENT .....	5
SECTION VI TEST ITEMS .....	5
SECTION VII TEST REQUIREMENTS .....	6
SECTION VIII RESULTS .....	6
SECTION IX OPERATION NOTES.....	7
APPENDIX ANALYSIS OF TEST DATA .....	A-1

## SECTION I. INTRODUCTION

The US Army CECOM Center for Night Vision and Electro-Optics (C<sub>2</sub>NVEO) is responsible for developing cryogenic coolers for all infrared imaging systems for the Army. C<sub>2</sub>NVEO also maintains configuration management control of the forward-looking infrared (FLIR) Common Module coolers used in thermal imagers in fielded Army weapon systems such as: M60A3 and M1 Tanks, Bradley Fighting Vehicle (BFV) System, tube-launched, optically tracked, wire-guided (TOW) Missile System, and Army Attack Helicopters. Currently, there are over 30,000 coolers in fielded systems and several thousand more are added each year. C<sub>2</sub>NVEO conducts development programs and monitors contractor internal research and development efforts to improve cooler performance such as reliability, audio noise, power consumption, and output vibration.

The HD-1045 1/4-Watt Split Stirling Cooler was originally designed and developed by the C<sub>2</sub>NVEO in the early 1970s as a replacement for the gas bottle/cryostat used on the Manportable Common Thermal Night Sights. To date, however, the HD-1045 cooler has been used in the field in the Integrated Sight Unit (ISU) of the BFV System and is currently being used in the Driver Thermal Viewer (DTV) full scale development program.

This document describes and reports the results of reliability testing done on Hughes Temperature Controlled 1/4 Watt Split Cycle Cryogenic Coolers (HD-1045 (V)/UA), referred to herein as the *coolers*. This testing was conducted by personnel of the Far Infrared Engineering (FIRE) Team during the period of June 1988 to March 1989. (KER)

## SECTION II. BACKGROUND

The Driver's Thermal Viewer (DTV) program was slated to incorporate the 1/4 Watt Linear Cooler during Full Scale Engineering Development (FSED). Because of cost constraints in the DTV program and schedule slips in linear cooler development, this was not possible. Instead, the HD-1045 1/4 Watt Split Cooler was chosen for use in the DTV FSED units. The non-temperature controlled 1/4 Watt Split Cooler was initially developed in the early 1980s and is used in the Bradley Fighting Vehicle (BFV) Integrated Sight Unit (ISU). This cooler has exhibited a very low reliability due to its susceptibility to gaseous and particulate contamination from bearing grease, lip seal wear, and gear wear. Because of these shortcomings, no vendor has been able to meet the development specification reliability requirement of a 1,000 hour lower mean-time-before-failure (MTBF). However, over the years, improvements have been made to address these problems and a temperature control feature has been added. No testing had been done on the improved design; therefore, no evaluation of the cooler's reliability was possible.

### **SECTION III. TEST OBJECTIVE**

The objective of this reliability testing was to establish a lower mean-time-to-failure (MTTF) value for the cooler. This value will be used to evaluate the probability of the coolers passing the DTV quality, environmental, life, and operational testing.

### **SECTION IV. TEST DESCRIPTION**

The reliability demonstration test was conducted on three coolers in accordance with the following parameters:

- Test equipment and instrumentation as defined in Figure 1.
- Temperature and cooler power cycling as defined in Figure 2.
- Periodic dismounting of the coolers from the reliability test set for leak rate testing and room temperature baseline testing.
- Hourly monitoring of test conditions and cooler performance.
- Collection of the following data:
  - Cycle data
    - Date
    - Cycle number
    - Time of start of cycle
  - Test Conditions
    - Heat load
    - Chamber temperature
  - Cooler Performance
    - Coldtip temperature
    - Compressor housing temperature
    - Cooler power



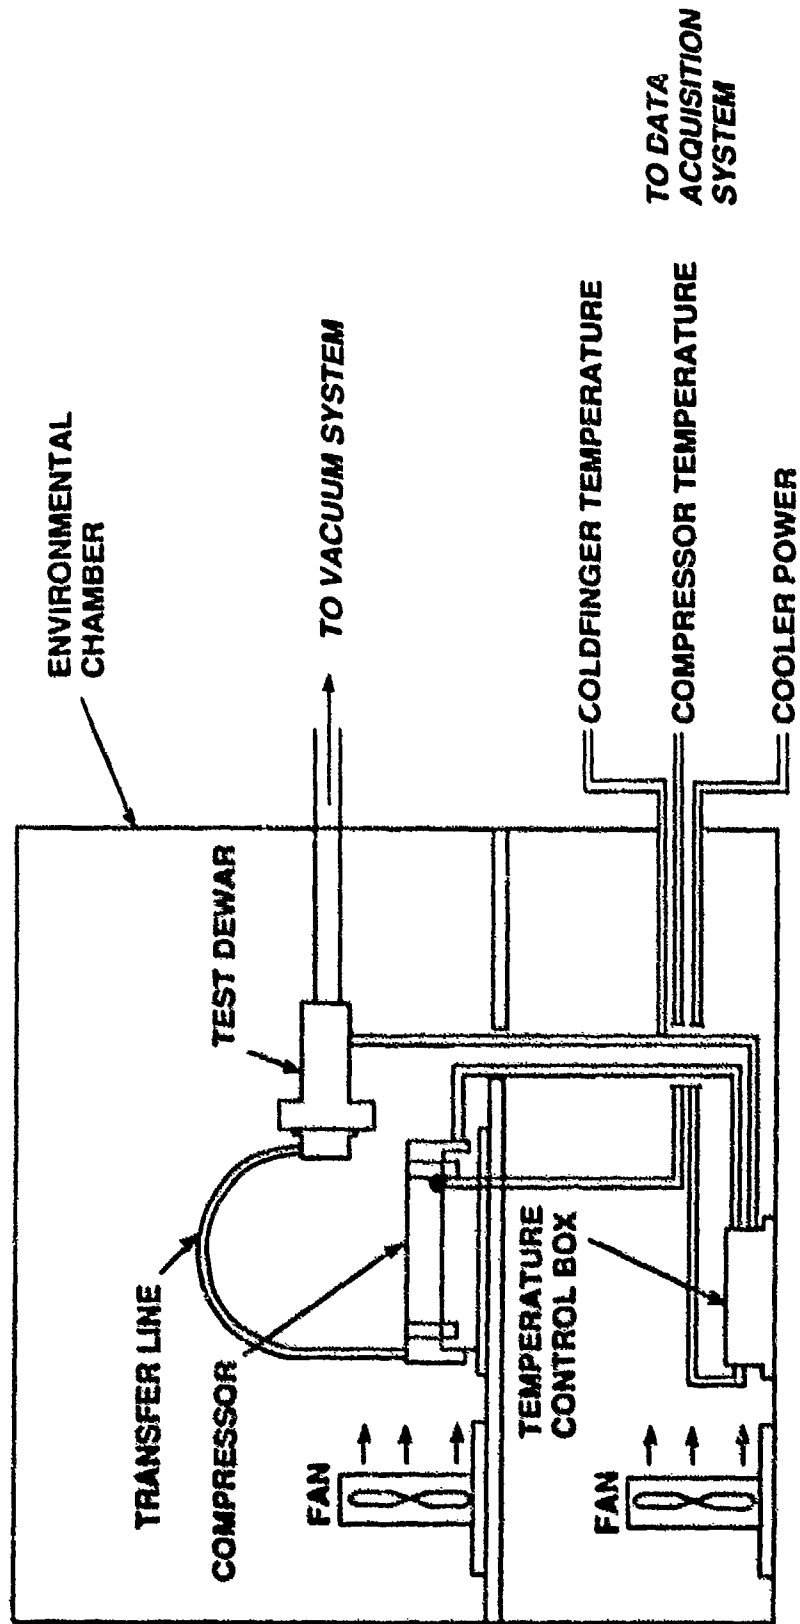


Figure 1

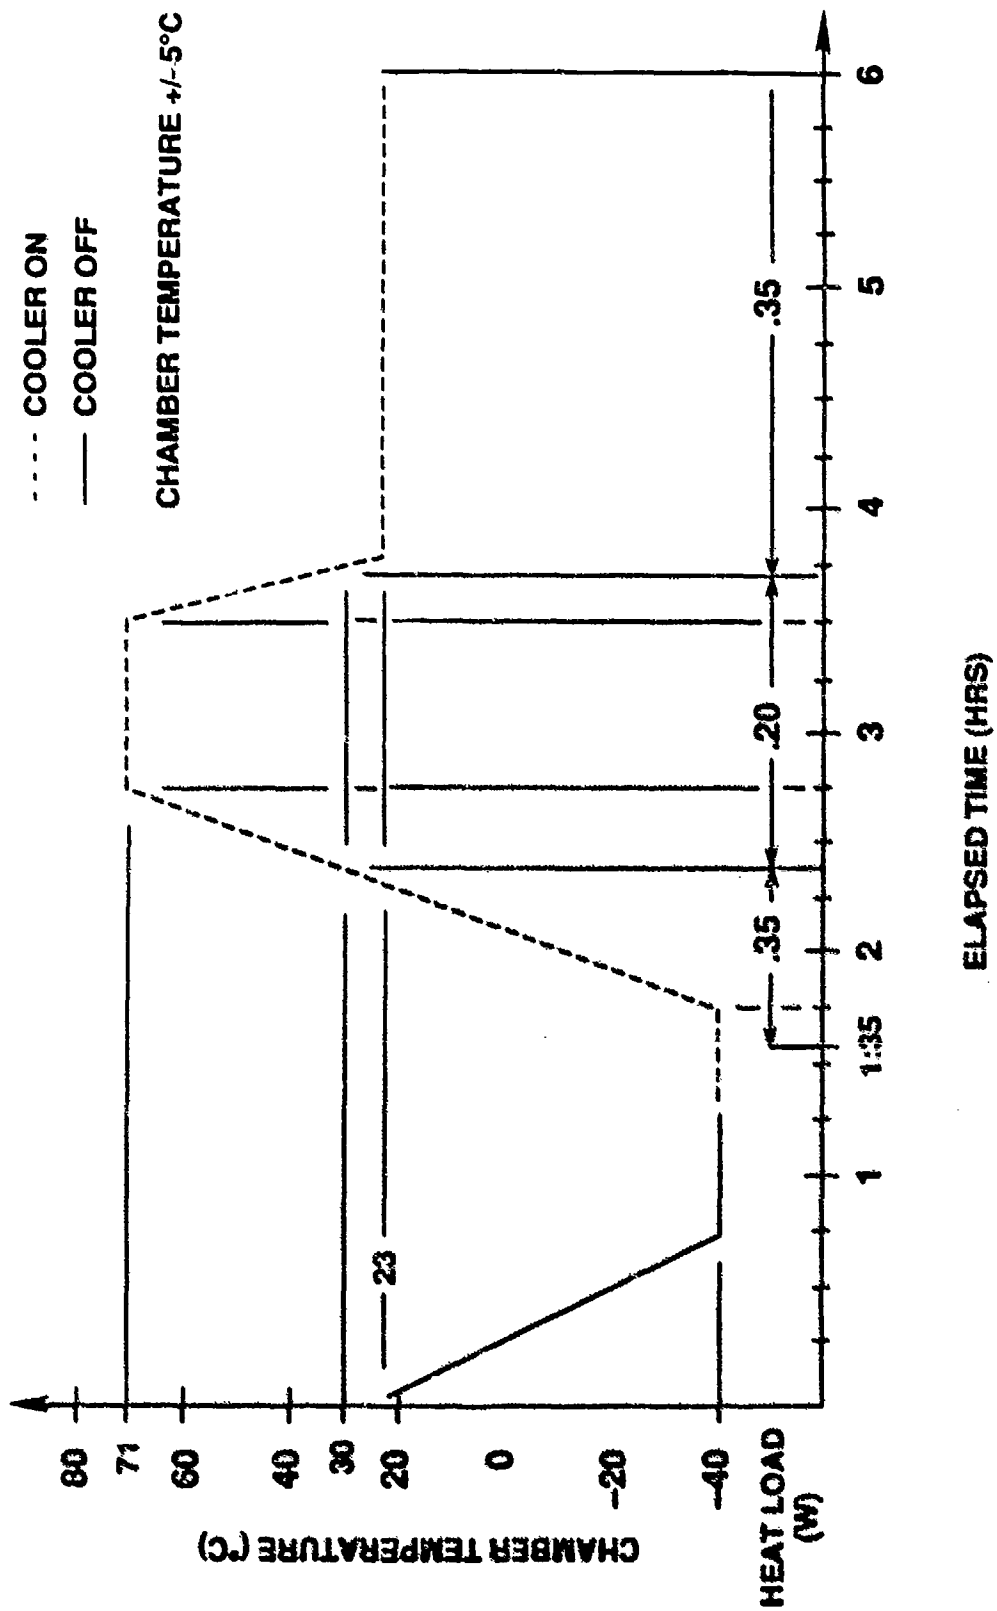


Figure 2

## SECTION V. TEST EQUIPMENT

The following equipment (schematically represented in Figure 1) was used by C<sup>2</sup>NVEO to conduct the reliability tests:

- A vacuum and test dewar system that provides a vacuum of at least  $1 \times 10^{-6}$  Torr at the vacuum manifold during testing.
- A computer test control and data acquisition system that provides the necessary inputs to the cooler during the test and records the data. The parameters that the computer controls are the timing and magnitude of the input voltage to the temperature control boxes and the timing and magnitude of the input voltage to the cooler heat load. The data collected consisted of the temperature of the coldfinger, chamber temperature, compressor housing temperature, and input voltage and current which are used to calculate the cooler input power by the equation—

$$\text{Power} = \text{Voltage} \times \text{Current}$$

- An automated environmental chamber that controls the ambient temperature. Fans were positioned inside the chamber to circulate air over the compressor housing bodies, the warm end of the coldfingers, and the temperature control circuit boxes.
- The mounting and instrumenting hardware for the cooler compressor body and the coldfinger. The compressor bodies were mounted in an Aluminum fixture weighing .635 pound. The compressor body temperatures were read by thermistors mounted on the surface of the coolers next to the fixture. The coldfingers were mounted in a vacuum manifold serving as a test dewar. A test mass was secured on the coldfinger of each cooler using thermal grease to form good thermal contact. This thermal mass consisted of: .865 gram of Aluminum; a 2N2222 temperature diode to measure the temperature of the coldfinger; and a 1,000 Ohm  $\pm 1\%$  resistor to which a bias was applied to generate an applied load. This assembly provided a thermal mass of 120 Joules.

## SECTION VI. TEST ITEMS

The items on test were three Hughes Aircraft Temperature Controlled 1/4 Watt Split Stirling Cycle Cryogenic Coolers, serial numbers 5554, 5484, and 5559. They were operated in conjunction with three temperature control circuit boxes.

## SECTION VII. TEST REQUIREMENTS

Since no official government specification exists for a temperature controlled rotary drive cooler, this testing was done only to evaluate confidence in the cooler. The requirements used for the test were:

- Cooldown time: 100K in less than 7.5 minutes  
85K in less than 10 minutes
- Input power: not greater than 35 watts at any time
- Coldtip temperature: not greater than 85K at any time
- Leak rate: must not be greater than  $1.0 \times 10^{-6}$  std cc/sec air equivalent with the ambient temperature  $+23^{\circ}\text{C} \pm 5^{\circ}\text{C}$

Although these requirements were drawn from the HD-1045 (V)/UA specification, this test in no way constituted an official qualification.

## SECTION VIII. RESULTS

All of the coolers went out of specification during the test. The mode of failure, common to all three, was an out of specification coldfinger temperature at the high temperature ( $71^{\circ}\text{C}$ ) section of the reliability cycle. The coolers failed at the following times:

COOLER TEST #	COOLER S/N	FAILURE CYCLE	ACCRUED RUNTIME
1	5554	421	2,029.07
2	5484	379	1,829.10
3	5559	366	1,767.45

These numbers contribute to a total accumulated time of 5,625.62 and an MTTF of 1,875.21.

## SECTION IX. OPERATION NOTES

The test was performed during the period of 7 June 1988 to 6 March 1989. The test consisted of reliability testing with periodic stops for cooler leak rate testing, equipment maintenance, and software debugging. Although the coolers were considered failed at the times listed in Section VIII, the test was continued to gain as much information about the cooler's life performance as possible. The coolers were run for a total of 2,560.1 hours each. This total is comprised of the following figures.

- 524 complete cycles @ 4.75 hr/cycle      =      2,489.00 hr
- 15 partial cycles                              =      32.35 hr
- Time from a computer malfunction        =      38.75 hr

TOTAL RUNTIME      =      2,560.10 hr

The partial cycles were due to specification violation prompted aborts, test equipment failures, and operator interruptions. The 38.75 hours of runtime from a computer malfunction were accrued when the data logging function hung up and the coolers ran continuously over a weekend. During this period, the temperature chamber, controlled by an independent computer, continued to run through the cycle. The coolers also ran with an applied load of 350 mW over this time period. The Product Assurance Office was consulted and recommended that the hours accumulated be counted as runtime.

## APPENDIX

### ANALYSIS OF TEST DATA

The data collected during the testing is chronological. During each cycle, the computer collected data and printed it out as it was received. This resulted in the data being produced in the form of a three-page sheet per cycle. Due to the large volume of this information, only the second cycle and the cycle of failure data sheets for all three coolers are included in this report (pages A-2 through A-11). All test data is on file at Night Vision and is available on request.

The pertinent aspects of the data have been summarized into two graphs per cooler. The first shows the input power at 1:45, 3:30, and 6:00 elapsed time into the test (pages A-12 through A-14). The second records the coldtip temperature at these same cycle times (pages A-15 through A-17). These times correlate, respectively, with the ends of the low ( $-40^{\circ}\text{C}$ ), high ( $71^{\circ}\text{C}$ ), and room temperature ( $23^{\circ}\text{C}$ ) sections of the test.

These figures clearly show the degradation of cooler performance at high temperature over the duration of the test. It should be noted that the temperature control voltage was changed for coolers 1 and 3, causing them to run at full speed at cycle 375 in the test. This is evidenced by the drop in coldtip temperature at  $-40^{\circ}\text{C}$  and  $23^{\circ}\text{C}$  ambient temperature.

The other important aspect of the data is the variance in coldtip temperature with ambient temperature. The temperature that the coldtip stabilized about appeared to be 74K at  $-40^{\circ}\text{C}$  ambient temperature, 77K at  $23^{\circ}\text{C}$  ambient, and 81K at  $71^{\circ}\text{C}$  ambient. With closed loop feedback temperature control, the stabilized temperature should be constant,  $\pm 1.5\text{K}$  across all ambient temperatures.

CYCLE: 2    STARTED: 8 Jun 1988 06:41:16

TEST DATA WILL BE STORED IN THE FOLLOWING FILES:

/LTDATA/HAC\_LIFE2.LTD:CS80,7,0

/LTDATA/HAC\_LIFE2.BSL:CS80,7,0

/LTDATA/HAC\_LIFE2.SPV:CS80,7,0

---

ELAPSED TIME	CHAMBER TEMP (C)	#	POWER (W)	FINGER TEMP (K)	COOLER HOUSING TEMP (C)	HEAT LOAD (W)	SPECIFICATION VIOLATIONS
-----------------	------------------------	---	--------------	-----------------------	----------------------------------	---------------------	-----------------------------

---

00:00	23.15	1	0.00	***.**	22.78	0.00	
00:00	23.15	2	0.00	***.**	22.66	0.00	
00:00	23.15	3	0.00	***.**	22.79	0.00	
00:15	-5.48	1	0.00	***.**	9.91	0.00	
00:15	-5.48	2	0.00	***.**	4.92	0.00	
00:15	-5.48	3	0.00	***.**	4.33	0.00	
00:30	-22.41	1	0.00	***.**	-13.64	0.00	
00:30	-22.41	2	0.00	***.**	-16.13	0.00	
00:30	-22.41	3	0.00	***.**	-14.60	0.00	
00:45	-36.17	1	0.00	***.**	-28.26	0.00	
00:45	-36.17	2	0.00	***.**	-30.64	0.00	
00:45	-36.17	3	0.00	***.**	-29.04	0.00	
01:00	-40.91	1	0.00	***.**	-35.76	0.00	
01:00	-40.91	2	0.00	***.**	-37.74	0.00	
01:00	-40.91	3	0.00	***.**	-36.64	0.00	
01:15	-41.30	1	0.00	***.**	-37.04	0.00	
01:15	-41.30	2	0.00	***.**	-38.54	0.00	
01:15	-41.30	3	0.00	***.**	-37.69	0.00	

COOLER NUMBER #1 100K COOL DOWN TIME: 3.345

COOLER NUMBER #2 100K COOL DOWN TIME: 3.615

COOLER NUMBER #3 100K COOL DOWN TIME: 3.553

COOLER NUMBER #1 85K COOL DOWN TIME: 3.925

COOLER NUMBER #2 85K COOL DOWN TIME: 3.968

COOLER NUMBER #3 85K COOL DOWN TIME: 3.970

01:30	-40.89	1	6.70	79.82	-34.82	0.00
01:30	-40.89	2	8.68	80.80	-36.62	0.00
01:30	-40.89	3	7.78	81.55	-35.00	0.00
01:45	-40.63	1	12.52	81.81	-33.62	.35
01:45	-40.63	2	12.85	83.18	-34.87	.35
01:45	-40.63	3	13.49	84.09	-32.47	.35
02:00	-1.77	1	13.08	81.67	-8.22	.35
02:00	-1.77	2	14.02	82.26	-6.50	.35
02:00	-1.77	3	14.96	82.86	-4.60	.35
02:15	22.63	1	14.94	80.68	17.20	.35
02:15	22.63	2	15.68	80.60	18.81	.35
02:15	22.63	3	17.41	80.97	20.09	.35
02:30	45.01	1	14.92	78.75	39.87	.20
02:30	45.01	2	15.00	78.17	41.72	.20
02:30	45.01	3	17.03	78.12	42.00	.20
02:45	63.50	1	13.43	78.66	59.47	.20
02:45	63.60	2	16.96	77.83	61.49	.20
02:45	63.60	3	20.13	77.82	61.36	.20
03:00	71.89	1	16.67	78.72	73.58	.20
03:00	71.89	2	18.09	77.59	74.78	.20
03:00	71.89	3	20.86	77.75	74.87	.20
03:15	72.36	1	17.89	78.60	76.77	.20
03:15	72.36	2	19.32	77.37	77.20	.20
03:15	72.36	3	21.28	77.53	77.46	.20
03:30	71.86	1	17.70	78.63	77.40	.20
03:30	71.86	2	19.10	77.59	77.63	.20
03:30	71.86	3	20.80	77.59	77.95	.20
03:45	32.41	1	15.54	78.28	54.48	.20
03:45	32.41	2	16.20	77.32	50.46	.20
03:45	32.41	3	18.77	77.47	50.95	.20
04:00	24.60	1	18.39	79.74	35.81	.35
04:00	24.60	2	19.41	79.42	33.29	.35
04:00	24.60	3	18.77	79.68	35.25	.35
04:15	23.26	1	17.97	79.94	30.31	.35
04:15	23.26	2	17.44	79.66	29.43	.35
04:15	23.26	3	21.47	79.89	30.78	.35
04:30	23.26	1	16.72	79.90	29.25	.35
04:30	23.26	2	18.15	80.12	28.83	.35
04:30	23.26	3	19.39	79.94	30.16	.35
04:45	22.69	1	17.21	79.88	29.22	.35
04:45	22.69	2	19.13	78.88	28.90	.35
04:45	22.69	3	22.59	79.06	30.16	.35



05:00	23.38	1	17.26	79.91	28.08	.35
05:00	23.38	2	18.68	77.83	28.77	.35
05:00	23.38	3	20.85	77.54	30.41	.35
05:15	23.28	1	16.07	79.90	27.95	.35
05:15	23.28	2	17.60	77.86	28.61	.35
05:15	23.28	3	25.27	77.47	30.26	.35
05:30	23.23	1	16.57	79.89	27.94	.35
05:30	23.23	2	17.94	78.15	28.59	.35
05:30	23.23	3	25.54	77.51	30.25	.35
05:45	23.24	1	17.20	79.91	27.94	.35
05:45	23.24	2	19.14	77.98	28.60	.35
05:45	23.24	3	19.37	77.49	30.25	.35
06:00	22.99	1	17.55	79.87	27.93	.35
06:00	22.99	2	17.61	77.84	28.57	.35
06:00	22.99	3	24.91	77.47	30.18	.35

CYCLE: 366 STARTED: 24 Oct 1988 10:02:30

TEST DATA WILL BE STORED IN THE FOLLOWING FILES:

/LTDATA/HAC\_LIFE366.LTD:CS80,7,0

/LTDATA/HAC\_LIFE366.BSL:CS80,7,0

/LTDATA/HAC\_LIFE366.SPV:CS80,7,0

ELAPSED TIME	CHAMBER TEMP (C)	#	POWER (W)	FINGER TEMP (K)	COOLER HOUSING TEMP (C)	HEAT LOAD (W)	SPECIFICATION VIOLATIONS
00:00	19.37	1	0.00	***. **	22.46	0.00	
00:00	19.37	2	0.00	***. **	21.93	0.00	
00:00	19.37	3	0.00	***. **	23.59	0.00	
00:15	1.87	1	0.00	***. **	8.68	0.00	
00:15	1.87	2	0.00	***. **	8.47	0.00	
00:15	1.87	3	0.00	***. **	7.56	0.00	
00:30	-10.27	1	0.00	***. **	-8.02	0.00	
00:30	-10.27	2	0.00	***. **	-8.12	0.00	
00:30	-10.27	3	0.00	***. **	-5.66	0.00	
00:45	-19.35	1	0.00	***. **	-17.44	0.00	
00:45	-19.35	2	0.00	***. **	-17.48	0.00	
00:45	-19.35	3	0.00	***. **	-15.68	0.00	
01:00	-27.13	1	0.00	***. **	-24.24	0.00	
01:00	-27.13	2	0.00	***. **	-24.83	0.00	
01:00	-27.13	3	0.00	***. **	-23.12	0.00	
01:15	-32.47	1	0.00	***. **	-29.22	0.00	
01:15	-32.47	2	0.00	***. **	-29.99	0.00	
01:15	-32.47	3	0.00	***. **	-28.85	0.00	

COOLER NUMBER #3 120K COOL DOWN TIME: 2.985

COOLER NUMBER #1 120K COOL DOWN TIME: 3.340

COOLER NUMBER #2 120K COOL DOWN TIME: 3.322

COOLER NUMBER #3 100K COOL DOWN TIME: 3.578

COOLER NUMBER #1 100K COOL DOWN TIME: 3.940

COOLER NUMBER #2 100K COOL DOWN TIME: 3.922

COOLER NUMBER #3 85K COOL DOWN TIME: 3.882

COOLER NUMBER #1 85K COOL DOWN TIME: 4.237

COOLER NUMBER #2 85K COOL DOWN TIME: 4.600

01:30	-35.74	1	8.92	75.21	-31.04	0.00
01:30	-35.74	2	6.89	76.03	-32.07	0.00
01:30	-35.74	3	12.58	77.02	-29.12	0.00
01:45	-37.61	1	14.58	78.12	-32.97	.35
01:45	-37.61	2	13.89	79.92	-34.06	.35
01:45	-37.61	3	14.83	79.82	-29.92	.35
02:00	3.83	1	15.59	78.07	1.62	.35
02:00	3.83	2	16.99	78.82	1.76	.35
02:00	3.83	3	16.23	79.09	2.03	.35
02:15	27.58	1	19.09	77.26	25.67	.35
02:15	27.58	2	18.95	78.24	25.82	.35
02:15	27.58	3	19.79	77.77	25.23	.35
02:30	46.65	1	15.19	75.09	45.07	.20
02:30	46.65	2	16.42	75.82	45.24	.20
02:30	46.65	3	16.59	75.86	45.96	.20
02:45	63.68	1	18.35	75.25	62.20	.20
02:45	63.68	2	15.87	76.13	62.38	.20
02:45	63.68	3	23.05	76.27	65.01	.20
03:00	72.17	1	23.80	76.73	73.11	.20
03:00	72.17	2	21.43	79.01	73.04	.20
03:00	72.17	3	23.18	81.98	77.71	.20
03:15	72.05	1	25.72	78.04	74.23	.20
03:15	72.05	2	22.24	81.95	74.06	.20
03:15	72.05	3	23.33	91.66	78.59	.20 <- FINGER TEMP OUT OF SPEC
03:30	71.89	1	23.54	78.95	74.26	.20
03:30	71.89	2	22.72	82.66	74.09	.20
03:30	71.89	3	18.94	92.61	78.30	.20 <- FINGER TEMP OUT OF SPEC
03:45	40.67	1	19.41	75.15	48.40	.20
03:45	40.67	2	17.70	75.89	47.13	.20
03:45	40.67	3	21.59	79.85	55.24	.20
04:00	24.98	1	15.68	79.64	27.84	.35
04:00	24.98	2	20.51	77.39	27.98	.35
04:00	24.98	3	21.36	81.03	35.47	.35 <- LOAD POWER OUT OF SPEC
04:15	23.08	1	17.54	77.32	26.47	.35
04:15	23.08	2	53	77.42	25.75	.35
04:15	23.08	3	20.30	77.32	30.27	.35
04:30	20.36	1	17.12	77.18	23.83	.35
04:30	20.36	2	19.88	77.35	22.97	.35
04:30	20.36	3	19.95	77.04	27.24	.35

04:45	20.27	1	19.02	77.38	23.17	.35
04:45	20.27	2	19.67	77.58	22.35	.35
04:45	20.27	3	20.15	77.18	25.60	.35
05:00	20.25	1	17.37	77.43	23.09	.35
05:00	20.25	2	19.43	77.59	22.27	.35
05:00	20.25	3	19.46	77.10	25.54	.35
05:15	20.21	1	19.71	77.32	23.13	.35
05:15	20.21	2	17.30	77.59	22.26	.35
05:15	20.21	3	20.62	77.12	25.59	.35
05:30	20.15	1	16.83	77.26	23.15	.35
05:30	20.15	2	17.02	77.58	22.28	.35
05:30	20.15	3	20.09	77.40	25.65	.35
05:45	19.98	1	17.39	76.90	23.17	.35
05:45	19.98	2	17.21	77.59	22.28	.35
05:45	19.98	3	20.43	77.34	25.63	.35
06:00	20.45	1	20.39	77.25	23.15	.35
06:00	20.45	2	19.71	77.57	22.31	.35
06:00	20.45	3	20.12	77.13	25.65	.35

CYCLE: 379 STARTED: 1 Nov 1988 17:18:37

TEST DATA WILL BE STORED IN THE FOLLOWING FILES:

/LIDATA/HAC LIFE379.LTD:CS80.7.0

/LIDATA/HAC LIFE379.BSL:CS80.7.0

/LIDATA/HAC LIFE379.SPV:CS80.7.0

ELAPSED TIME	CHAMBER TEMP (C)	#	POWER (W)	FINGER TEMP (K)	COOLER HOUSING TEMP (C)	HEAT LOAD (W)	SPECIFICATION VIOLATIONS
00:00	14.40	1	0.00	***. **	18.55	0.00	
00:00	14.40	2	0.00	***. **	17.20	0.00	
00:00	14.40	3	0.00	***. **	21.46	0.00	
00:15	-4.33	1	0.00	***. **	-1.04	0.00	
00:15	-4.33	2	0.00	***. **	-2.18	0.00	
00:15	-4.33	3	0.00	***. **	1.56	0.00	
00:30	-17.47	1	0.00	***. **	-14.69	0.00	
00:30	-17.47	2	0.00	***. **	-15.52	0.00	
00:30	-17.47	3	0.00	***. **	-12.56	0.00	
00:45	-29.26	1	0.00	***. **	-25.74	0.00	
00:45	-29.26	2	0.00	***. **	-26.84	0.00	
00:45	-29.26	3	0.00	***. **	-23.66	0.00	
01:00	-37.49	1	0.00	***. **	-33.28	0.00	
01:00	-37.49	2	0.00	***. **	-34.63	0.00	
01:00	-37.49	3	0.00	***. **	-32.34	0.00	
01:15	-40.91	1	0.00	***. **	-36.94	0.00	
01:15	-40.91	2	0.00	***. **	-38.37	0.00	
01:15	-40.91	3	0.00	***. **	-37.57	0.00	

COOLER NUMBER #3 120K COOL DOWN TIME: 2.715

COOLER NUMBER #1 120K COOL DOWN TIME: 3.059

COOLER NUMBER #2 120K COOL DOWN TIME: 3.047

COOLER NUMBER #3 100K COOL DOWN TIME: 3.293

COOLER NUMBER #1 100K COOL DOWN TIME: 3.638

COOLER NUMBER #2 100K COOL DOWN TIME: 3.633

COOLER NUMBER #3 85K COOL DOWN TIME: 3.888

COOLER NUMBER #1 85K COOL DOWN TIME: 4.233

COOLER NUMBER #2 85K COOL DOWN TIME: 4.221

01:30	-40.98	1	8.91	76.02	-36.33	0.00
01:30	-40.98	2	6.58	76.71	-38.00	0.00
01:30	-40.98	3	17.78	-89.28	-32.42	0.00
01:45	-41.11	1	13.86	78.82	-35.72	.35
01:45	-41.11	2	14.25	79.55	-37.58	.35
01:45	-41.11	3	20.87	63.18	-31.82	.35
02:00	-.20	1	16.09	78.83	-2.52	.35
02:00	-.20	2	15.13	79.00	-1.93	.35
02:00	-.20	3	20.89	68.77	-.77	.35
02:15	26.45	1	16.55	77.54	24.69	.35
02:15	26.45	2	19.54	78.09	25.11	.35
02:15	26.45	3	21.47	72.46	25.33	.35
02:30	48.52	1	15.36	75.30	46.05	.20
02:30	48.52	2	17.28	76.03	46.87	.20
02:30	48.52	3	23.82	63.29	49.31	.21
02:45	68.80	1	18.08	75.36	65.98	.20
02:45	68.80	2	18.55	76.52	67.14	.20
02:45	68.80	3	23.58	73.39	69.80	.21
03:00	71.97	1	24.41	77.38	73.41	.20
03:00	71.97	2	19.83	84.57	73.30	.20
03:00	71.97	3	24.05	83.57	78.46	.20
03:15	72.20	1	23.76	79.47	74.11	.20
03:15	72.20	2	22.67	86.35	73.98	.20 <- FINGER TEMP OUT OF SPEC
03:15	72.20	3	18.74	89.75	79.08	.21 <- FINGER TEMP OUT OF SPEC
03:30	72.10	1	21.29	80.42	74.18	.20
03:30	72.10	2	22.97	83.93	74.10	.20
03:30	72.10	3	20.13	93.34	78.59	.20 <- FINGER TEMP OUT OF SPEC
03:45	40.95	1	18.01	75.00	49.00	.20
03:45	40.95	2	16.15	75.97	47.29	.20
03:45	40.95	3	24.06	79.47	55.97	.20
04:00	25.47	1	19.63	77.87	28.15	.35
04:00	25.47	2	20.40	77.38	28.20	.35
04:00	25.47	3	21.93	78.77	36.07	.35 <- LOAD POWER OUT OF SPEC
04:15	22.75	1	17.00	76.52	26.30	.35
04:15	22.75	2	18.20	77.30	25.44	.35
04:15	22.75	3	21.74	76.22	30.35	.35

04:30	20.24	1	16.86	77.06	23.61	.35
04:30	20.24	2	17.87	77.57	22.62	.35
04:30	20.24	3	21.62	75.06	27.42	.35
04:45	20.17	1	16.75	77.26	23.28	.35
04:45	20.17	2	19.48	77.62	22.38	.35
04:45	20.17	3	21.62	74.96	26.62	.35
05:00	20.19	1	17.22	76.85	23.28	.35
05:00	20.19	2	18.23	77.61	22.34	.35
05:00	20.19	3	21.58	74.92	26.73	.35
05:15	20.23	1	19.07	76.71	23.28	.35
05:15	20.23	2	18.05	77.60	22.36	.35
05:15	20.23	3	21.61	74.87	26.68	.35
05:30	20.05	1	20.65	76.91	23.29	.35
05:30	20.05	2	19.50	77.59	22.34	.35
05:30	20.05	3	21.65	74.89	26.79	.35
05:45	20.03	1	16.99	76.84	23.32	.35
05:45	20.03	2	19.96	77.58	22.35	.35
05:45	20.03	3	21.69	74.85	26.88	.35
06:00	19.99	1	20.55	76.97	23.32	.35
06:00	19.99	2	17.27	77.58	22.36	.35
06:00	19.99	3	21.68	74.84	26.80	.35

CYCLE: 421 STARTED: 29 Nov 1988 18:36:36

TEST DATA WILL BE STORED IN THE FOLLOWING FILES:

/LTDATA/HAC\_LIFE421.LTD:CS80,7,0

/LTDATA/HAC\_LIFE421.BSL:CS80,7,0

/LTDATA/HAC\_LIFE421.SPV:CS80,7,0

---

ELAPSED TIME	CHAMBER TEMP	#	POWER	FINGER TEMP	COOLER HOUSING TEMP	HEAT LOAD	SPECIFICATION VIOLATIONS
	(C)		(W)	(K)	(C)	(W)	

---

00:00	12.24	1	0.00	***. **	17.27	0.00
00:00	12.24	2	0.00	***. **	14.65	0.00
00:00	12.24	3	0.00	***. **	20.04	0.00
00:15	-7.49	1	0.00	***. **	-3.67	0.00
00:15	-7.49	2	0.00	***. **	-5.99	0.00
00:15	-7.49	3	0.00	***. **	-1.35	0.00
00:30	-21.66	1	0.00	***. **	-18.45	0.00
00:30	-21.66	2	0.00	***. **	-20.45	0.00
00:30	-21.66	3	0.00	***. **	-16.56	0.00
00:45	-33.40	1	0.00	***. **	-29.87	0.00
00:45	-33.40	2	0.00	***. **	-31.63	0.00
00:45	-33.40	3	0.00	***. **	-28.42	0.00
01:00	-40.88	1	0.00	***. **	-36.91	0.00
01:00	-40.88	2	0.00	***. **	-38.68	0.00
01:00	-40.88	3	0.00	***. **	-37.07	0.00
01:15	-40.77	1	0.00	***. **	-37.43	0.00
01:15	-40.77	2	0.00	***. **	-38.81	0.00
01:15	-40.77	3	0.00	***. **	-38.18	0.00

COOLER NUMBER #3 120K COOL DOWN TIME: 2.683

COOLER NUMBER #1 120K COOL DOWN TIME: 3.035

COOLER NUMBER #2 120K COOL DOWN TIME: 3.014

COOLER NUMBER #1 100K COOL DOWN TIME: 3.325

COOLER NUMBER #3 100K COOL DOWN TIME: 3.256

COOLER NUMBER #2 100K COOL DOWN TIME: 3.594

COOLER NUMBER #3 85K COOL DOWN TIME: 3.545



COOLER NUMBER #1 85K COOL DOWN TIME: 3.904

COOLER NUMBER #2 85K COOL DOWN TIME: 4.229

01:30	-40.91	1	9.57	75.99	-36.66	0.00
01:30	-40.91	2	6.51	76.59	-38.52	0.00
01:30	-40.91	3	20.77	-91.64	-33.49	0.00

01:45	-41.06	1	13.90	78.52	-36.08	.35
01:45	-41.06	2	13.60	78.75	-38.07	.35
01:45	-41.06	3	22.05	61.93	-32.01	.35

02:00	.19	1	14.93	78.22	-2.52	.35
02:00	.19	2	14.72	79.14	-.82	.35
02:00	.19	3	21.02	67.44	-.23	.36

02:15	25.93	1	16.92	77.11	23.92	.35
02:15	25.93	2	16.33	78.23	25.50	.35
02:15	25.93	3	21.97	72.23	25.15	.35

02:30	47.29	1	15.90	75.00	45.17	.20
02:30	47.29	2	16.49	76.21	47.08	.20
02:30	47.29	3	23.55	64.57	48.03	.20

02:45	67.39	1	19.69	75.04	64.90	.20
02:45	67.39	2	21.97	77.16	67.58	.20
02:45	67.39	3	24.82	76.97	68.43	.21

03:00	72.03	1	21.45	80.42	73.43	.20
03:00	72.03	2	21.26	87.81	73.88	.20 (- FINGER TEMP OUT OF SPEC
03:00	72.03	3	21.01	89.45	77.65	.20 (- FINGER TEMP OUT OF SPEC

03:15	72.09	1	20.93	83.29	74.23	.20
03:15	72.09	2	21.28	90.34	74.19	.20 (- FINGER TEMP OUT OF SPEC
03:15	72.09	3	19.98	95.37	78.30	.20 (- FINGER TEMP OUT OF SPEC


03:30	72.08	1	23.44	85.23	74.25	.20 (- FINGER TEMP OUT OF SPEC
03:30	72.08	2	21.66	90.94	74.13	.20 (- FINGER TEMP OUT OF SPEC
03:30	72.08	3	18.19	102.43	77.72	.20 (- FINGER TEMP OUT OF SPEC

03:45	38.33	1	17.99	75.12	46.64	.20
03:45	38.33	2	21.62	76.02	42.68	.20
03:45	38.33	3	17.77	81.21	52.32	.20

# Hughes Temperature Controlled HD-1045

Cooler #1 Input Power at Three Elapsed Cycle Times


+ 1:45 (-40 C)  
 □ 3:30 (71 C)  
 x 6:00 (23 C)  
 ▽ Specification

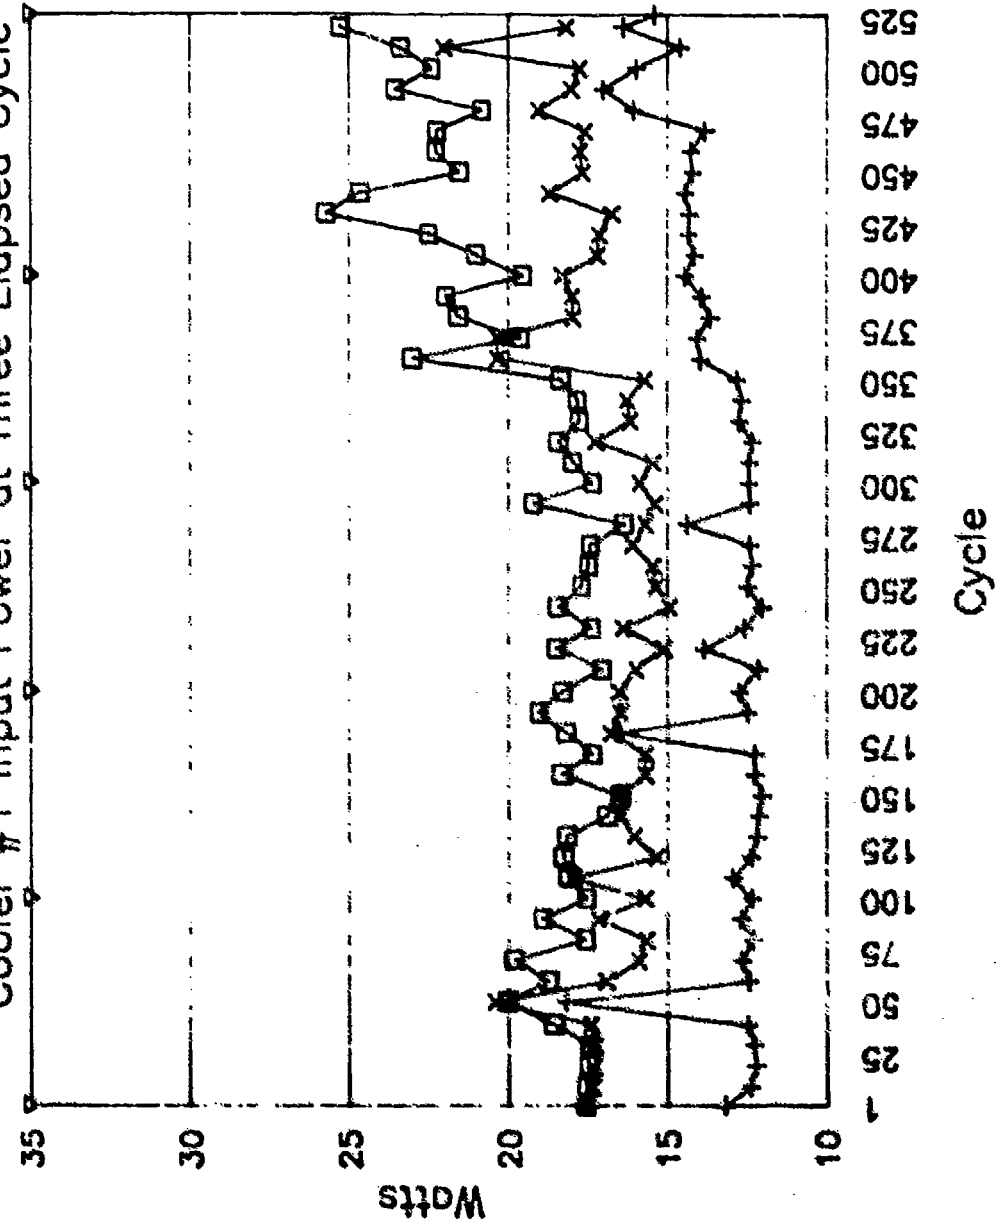

# Hughes Temperature Controlled HD-1045

Cooler #2 Input Power at Three Elapsed Cycle Times


- +— 1:45 (-40 C)
- 3:30 (71 C)
- x— 6:00 (23 C)
- ▽— Specification

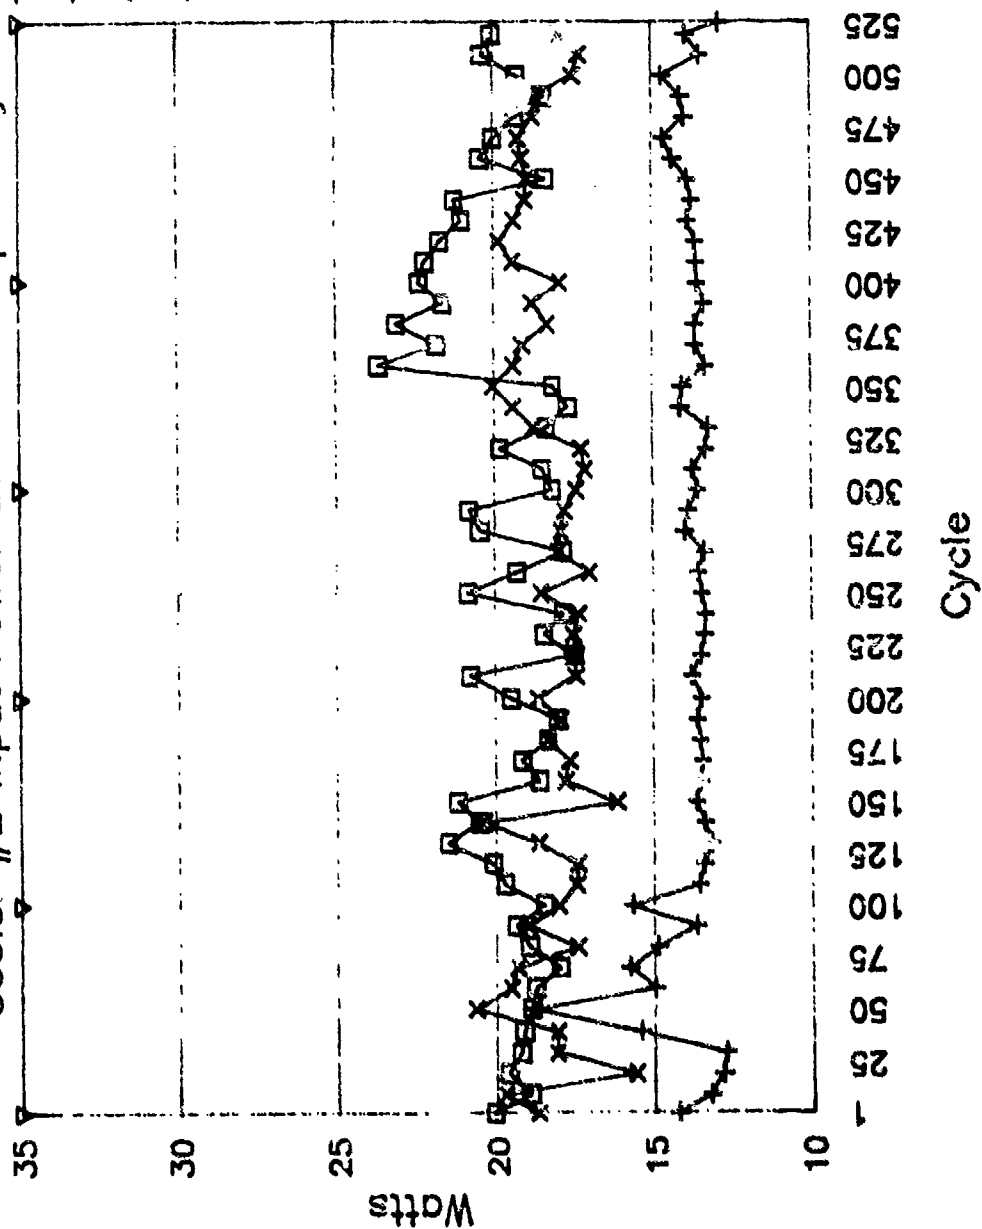

# Hughes Temperature Controlled HD-1045

Cooler #3 Input Power at Three Elapsed Cycle Times


+ 1:45 (-40 C)  
 □ 3:30 (71 C)  
 \* 6:00 (23 C)  
 ▽ Specification

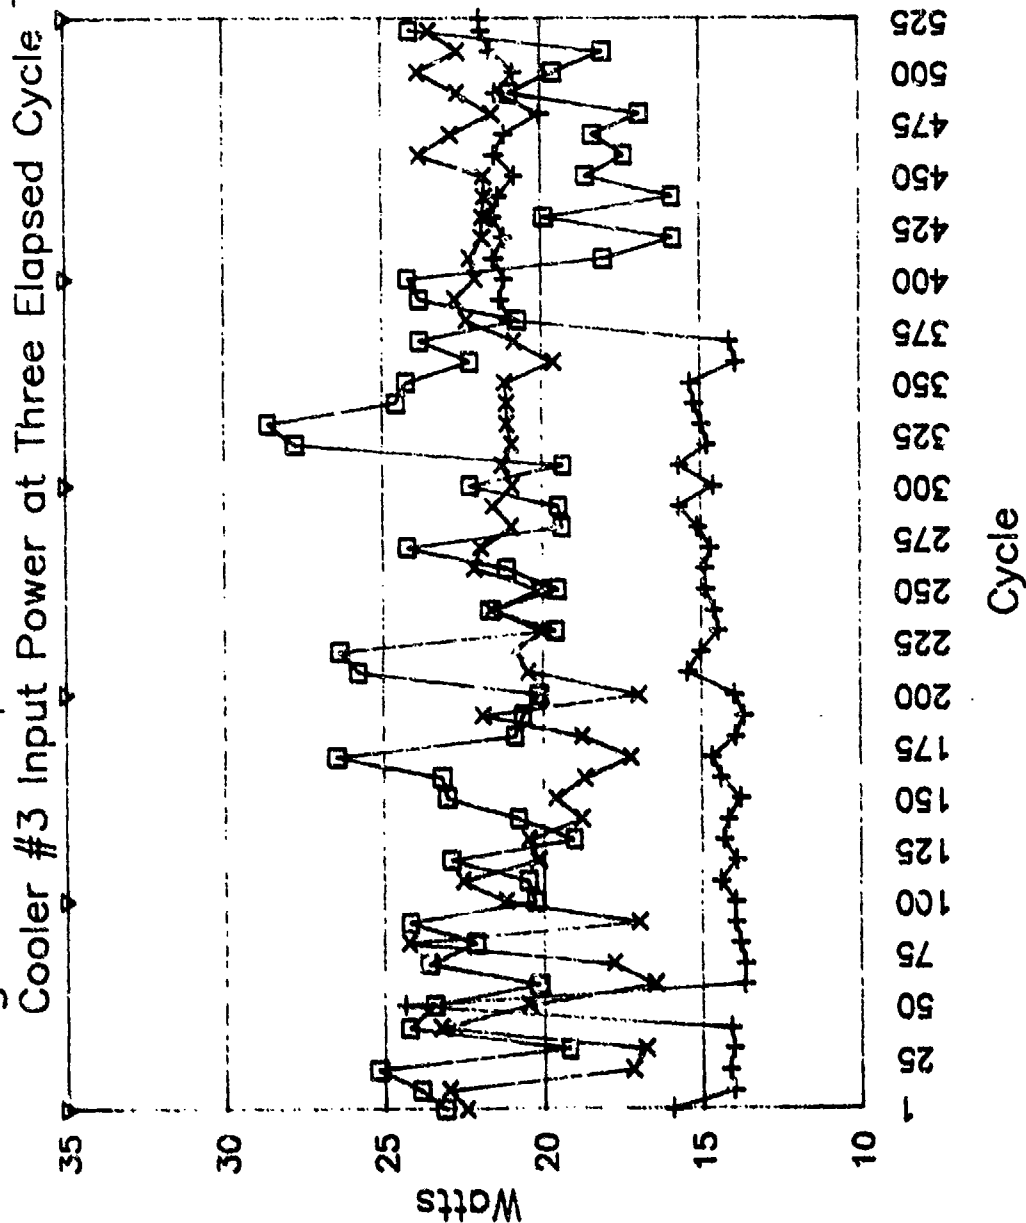

# Hughes Temperature Controlled HD-1045

Cooler #1 Coldtip Temperatures at Three Elapsed Cycle Times


+ 1:45 (-40 C)  
 □ 3:30 (71 C)  
 x 6:00 (23 C)  
 ▽ Specification

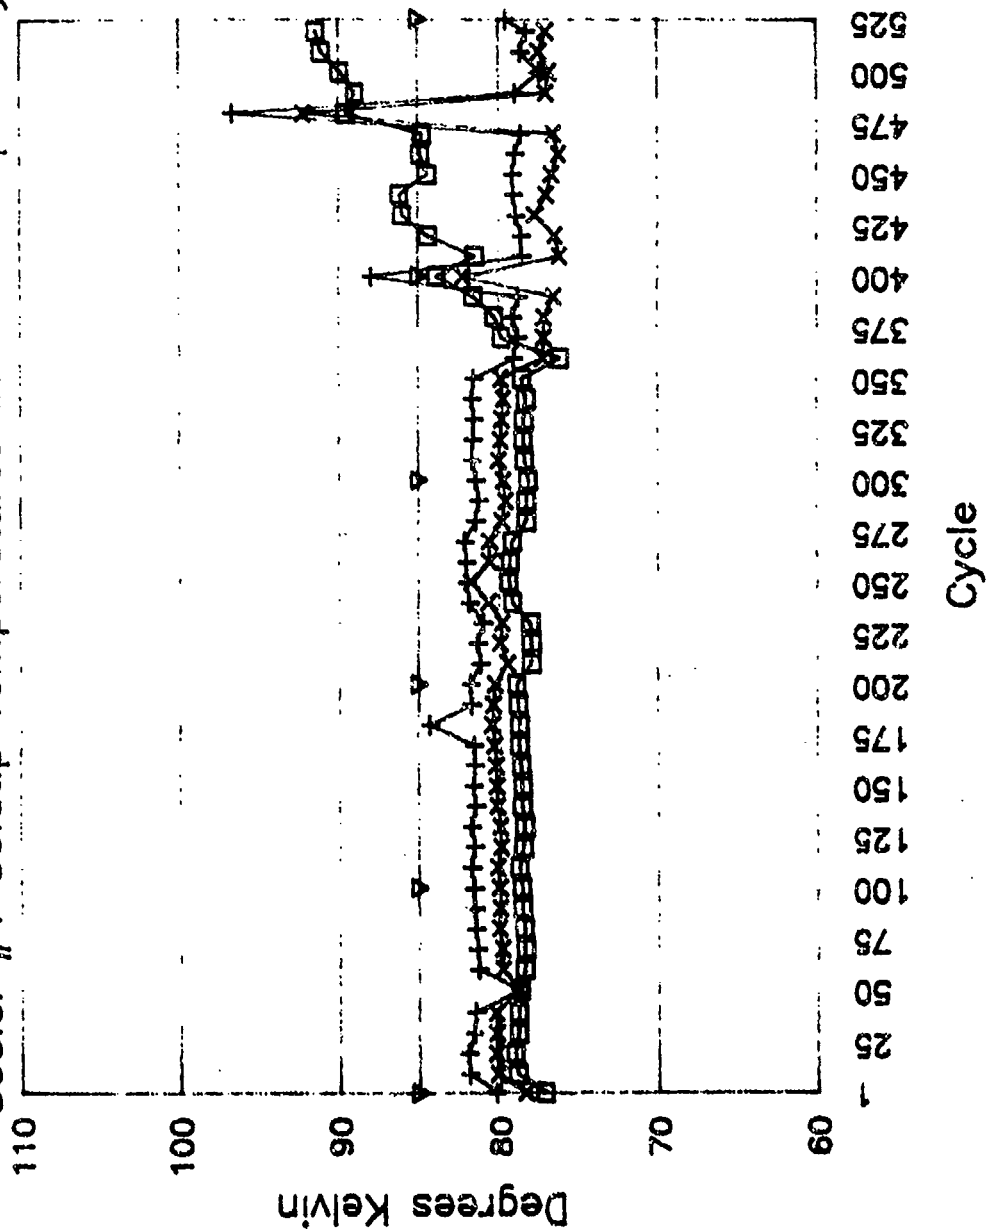

# Hughes Temperature Controlled HD-1045

Cooler #2 Coldtip Temperatures at Three Elapsed Cycle Times


- 1:45 (-40 C)
- 3:30 (71 C)
- 6:00 (23 C)
- Specification

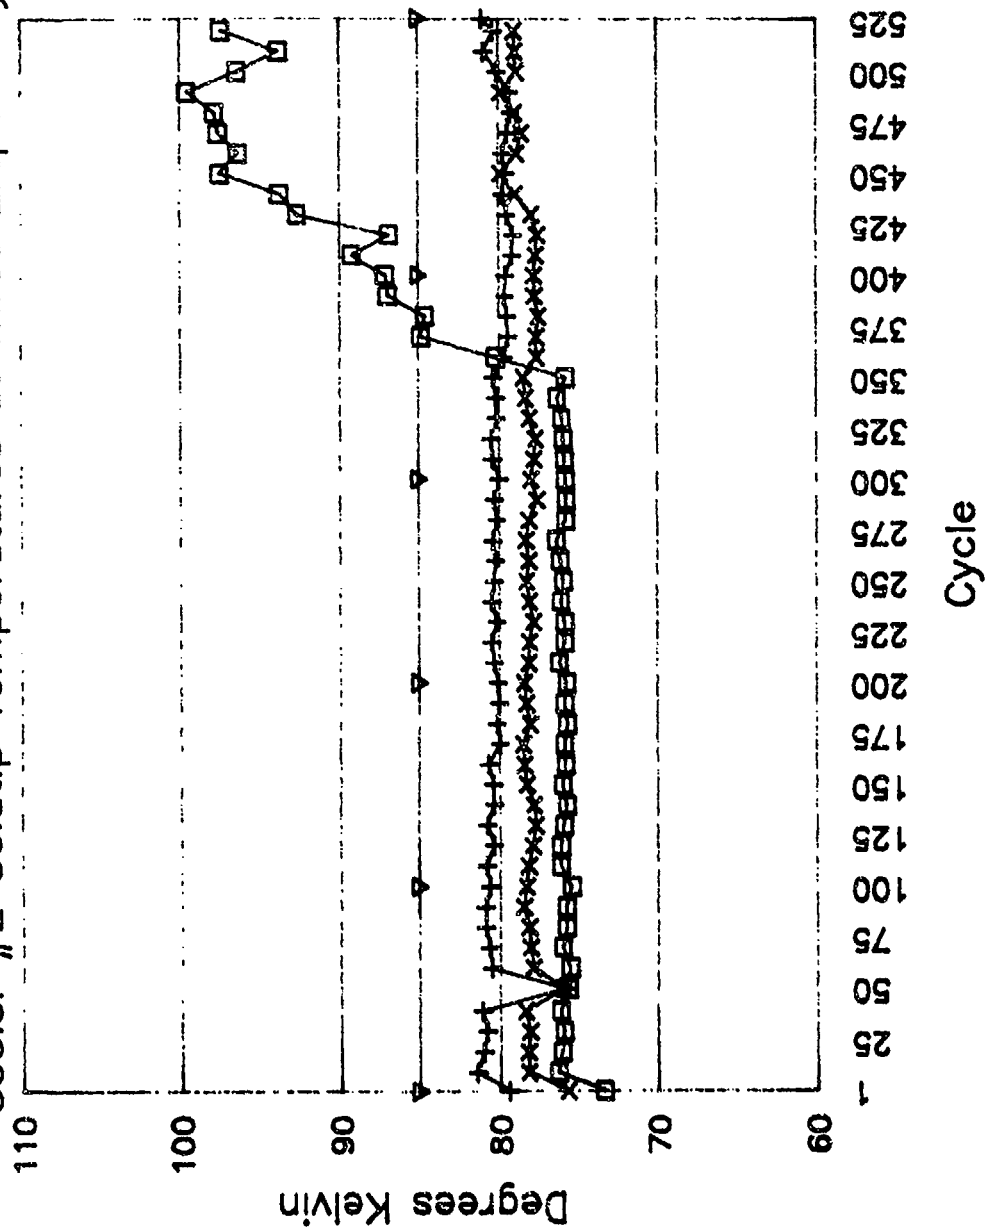

# Hughes Temperature Controlled HD-1045

Cooler #3 Coldtip Temperatures at Three Elapsed Cycle Times

- 1:45 (-40 C)
- 3:30 (71 C)
- 6:00 (23 C)
- Specification

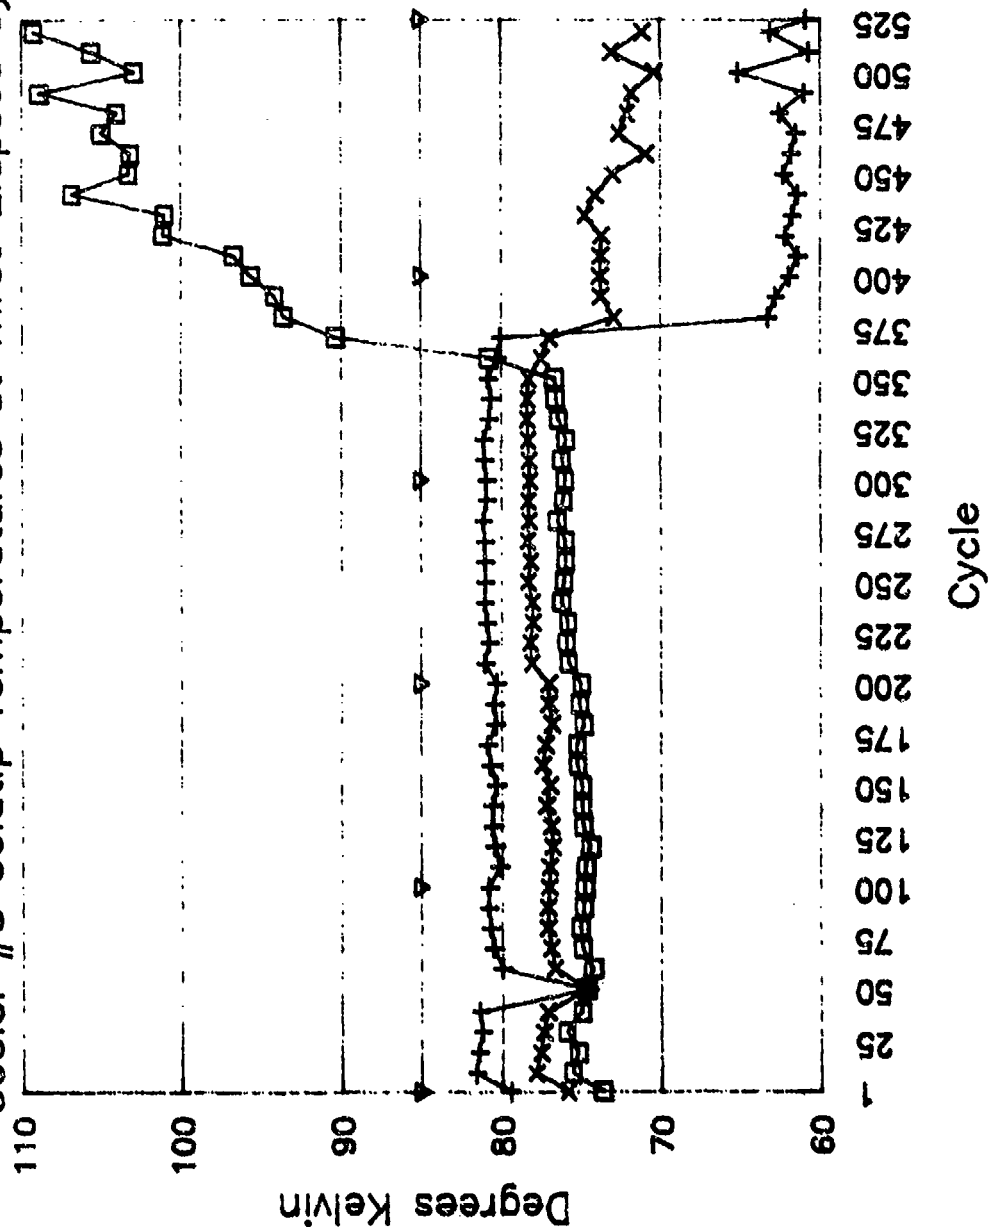

## **DISTRIBUTION LIST FOR REPORT AMSEL-NV-TR-0089**

- Director, C<sup>2</sup>NVEO
- 8 ATTN: AMSEL-RD-NV-SESD
- 1 AMSEL-RD-NV-D
- 1 Program Manager, Night Vision Devices  
Fort Belvoir, VA 22060-5677
- 2 Defense Technical Information Center (DTIC)  
ATTN: DTIC-FDAC  
Cameron Station  
Alexandria, VA 22304-6145
- Commander, Belvoir RD&E Center
- 1 ATTN: STRBE-BT, Tech Library
- 2 ASQNK-BVP-G, Visual Information Support Division  
Fort Belvoir, VA 22060-5606
- 1 Hughes Aircraft Company  
ATTN: Dave Giguere  
3100 West Lomita Boulevard  
P.O. Box 2999  
Torrence, CA 90509
- 1 Commander, US Army Communication and Electronics Command  
ATTN: AMSELL-PAR&T-EN (S. Pommeroy)  
Ft. Belvoir, VA 22060
- 1 Commander, US Army Missile Command  
ATTN: AMSMI-RD-TE-S-LA (E. Burroughs)  
Redstone Arsenal, AL 35898